



## Specifications

### Safety-relevant data

Type in accordance with IEC/EN 61496	type 2
Performance Level (PL) in accordance with ISO 13849-1 <sup>1)</sup>	PL d
Category in accordance with ISO 13849 <sup>1)</sup>	cat. 2
Mean time to dangerous failure (MTTFd)	425 years
Service life (TM)	20 years

### Optical data

Typ. operating range limit <sup>2)</sup>	0.5 ... 22 m
Operating range <sup>3)</sup>	0.5 ... 20 m
Light source <sup>4)</sup>	LED (modulated light)
Wavelength	624 nm (visible red light)

### Timing

Switching frequency	100 Hz
Response time	5 ms
Delay before start-up	≤ 100 ms

### Electrical data

Operating voltage $U_B$ <sup>5)</sup>	10 ... 30 VDC (incl. residual ripple)
Residual ripple	≤ 15% of $U_B$
Open-circuit current	≤ 15 mA per transmitter/receiver, ≤ 30 mA per pair
Switching output/function <sup>6)</sup>	2 push-pull switching outputs pin 2: PNP dark switching, NPN light switching pin 4: PNP light switching, NPN dark switching
Signal voltage high/low	$\geq (U_B - 2V) / \leq 2V$
Output current	max. 100 mA

### Indicators

#### Transmitter

Green LED	ready
Yellow LED	transmitter active

#### Receiver

Green LED	ready
Yellow LED	light path free
Yellow LED, flashing	light path free, no performance reserve

### Mechanical data

Housing	plastic (PC-ABS)
Optics cover	plastic (PMMA)
Weight (connector/cable/cable with connector)	50 g/140 g/60 g per pair
Connection type	M8 connector, 4-pin, or M12 connector, 4-pin, or cable, length 2 m (cross section 4x0.21 mm <sup>2</sup> ), or cable, length 0.2 m, with M12 connector, 4-pin

### Environmental data

Ambient temp. (operation/storage)	-30 °C ... +55 °C / -30 °C ... +60 °C
Protective circuit <sup>7)</sup>	2, 3
VDE safety class <sup>8)</sup>	II, all-insulated
Protection class	IP 66, IP 67
LED class	1 (acc. to EN 60825-1)
Standards applied	IEC 60947-5-2

### Activation input active

Transmitter active/not active	≥ 8 V / ≤ 2 V
Activation/disable delay	≤ 1 ms / ≤ 2 ms
Input resistance	10 kΩ ± 10%

- 1) In combination with a TNT 35
- 2) Typ. operating range limit: max. attainable range without performance reserve
- 3) Operating range: recommended range with performance reserve
- 4) Average life expectancy 100,000 h at an ambient temperature of 25 °C
- 5) For UL applications: for use in class 2 circuits only
- 6) The push-pull switching outputs must not be connected in parallel
- 7) 2=polarity reversal protection, 3=short-circuit protection for all transistor outputs
- 8) Rating voltage 50 V

## Tables

0.5	20	22
-----	----	----

	Operating range [m]
	Typ. operating range limit [m]

**SLSR 25B**
**Protective throughbeam photoelectric sensor**
**Order guide <sup>1)</sup>**

	<b>Designation</b>	<b>Part No.</b>
<b>With M12 connector</b>		
Transmitter and receiver	SLSR 25B/66.8-S12	
Transmitter	SLSSR 25B.8-S12	50108489
Receiver	SLSER 25B/66-S12	50108492
<b>With M8 connector</b>		
Transmitter and receiver	SLSR 25B/66.8-S8	
Transmitter	SLSSR 25B.8-S8	50108490
Receiver	SLSER 25B/66-S8	50108493
<b>With 2m cable</b>		
Transmitter and receiver	SLSR 25B/66.8	
Transmitter	SLSSR 25B.8	50108491
Receiver	SLSER 25B/66	50108494
<b>With 0.2m cable and M12 connector</b>		
Transmitter and receiver	SLSR 25B/66.8, 200-S12	
Transmitter	SLSSR 25B.8, 200-S12	50110151
Receiver	SLSER 25B/66, 200-S12	50110152

1) Version 2010 A-Z

## Safety notices

Before using the safety sensor, a risk evaluation must be performed according to valid standards. For mounting, operation and tests, this document as well as all applicable national and international standards and regulations must be observed, printed out and handed to the affected personnel.

Before working with the safety sensor, completely read and observe the documents applicable to your task.

In particular, the following national and international legal regulations apply for the commissioning, technical inspections and work with safety sensors:

- Machinery directive 2006/42/EC
- Use of Work Equipment Directive 89/655/EEC supplemented by Directive 95/63 EC
- Accident-prevention regulations and safety rules
- Other relevant standards
- Standards, e.g. ISO 13855

## Symbols



### Attention!

Warning sign – This symbol indicates possible dangers. Please pay especially close attention to these instructions!



This symbol identifies the transmitter.



This symbol identifies the receiver.

## Safety sensor area of application

The protective throughbeam photoelectric sensor is an active optoelectronic protective device only in connection with a safety-relevant control system, in which the cyclical testing of transmitter and receiver is carried out in accordance with EN 61496-1, up to category 2 and PL d in accordance with EN ISO 13849-1.



### Attention!

- The safety sensor protects persons at access points or at points of operation of machines and plants.
- The safety sensor only detects persons upon entry to the danger area; it does not detect persons who are located within the danger area. For this reason, a start-up/restart interlock is mandatory.
- No protective function without adequate safety distance.
- The power supply unit used to operate the photoelectric sensor has to be able to compensate for changes and interruptions of the supply voltage acc. to EN 61496-1.
- Also observe the safety notices in the documentation of the connected test device!
- Additional measures must be taken to ensure that the AOPD does not experience a dangerous failure due to glare from other light sources.

## Proper use

The safety sensor must only be used after it has been selected in accordance with the respectively valid instructions and relevant standards, rules and regulations regarding occupational safety and safety at work, and after it has been installed on the machine, connected, commissioned, and checked by a competent person.

## Foreseeable misuse

Any use other than that defined under the "Proper use" or which goes beyond that use is considered improper use. The user must ensure that no optical influence on the AOPD occurs through other forms of light beams, e.g. through

- wireless control devices on cranes,
- radiation from welding sparks,
- stroboscopic lights.

## Competent personnel

Prerequisites for competent personnel:

- He has a suitable technical education.
- He knows the instructions for the safety sensor and the machine.
- He has been instructed by the responsible person on the mounting and operation of the machine and of the safety sensor.

**SLSR 25B**

**Protective throughbeam photoelectric sensor**

**Responsibility for safety**

Manufacturer and operator must ensure that the machine and implemented safety sensor function properly and that all affected persons are adequately informed and trained.

The **manufacturer** of the machine is responsible for:

- Safe implementation of the safety sensor.
- Imparting all relevant information to the operator.
- Adhering to all regulations and directives for the safe commissioning of the machine.

The **operator** of the machine is responsible for:


- Instructing the operating personnel.
- Maintaining the safe operation of the machine.
- Adhering to all regulations and directives for occupational safety and safety at work.
- Regular testing by competent personnel.

**Safety distances**



**Attention!**

The protective throughbeam photoelectric sensor must be installed with the correctly calculated safety distance as well as suitable beam distances from a potentially dangerous motion: if an interruption of the light beam occurs, the danger area may only be reached once the machine has already come to a dead stop.

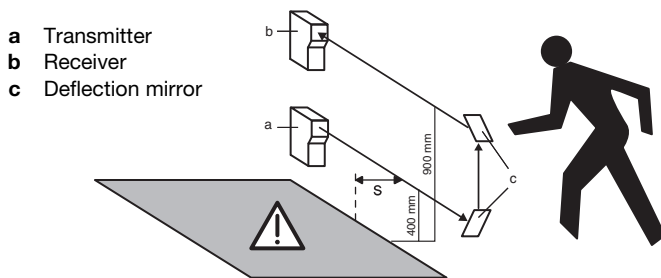

Beam distances in accordance with ISO 13855		
Number of beams	Heights above reference plane, e.g. floor [mm]	Additional distance C [mm]
1	750	1200
2	400, 900	850
3	300, 700, 1100	850
4	300, 600, 900, 1200	850

The safety distance **S** between photoelectric sensor and danger area is calculated using the following formula (ISO 13855):

$$S = (K \cdot T) + C$$

**S:** Safety distance [mm] between photoelectric sensor and danger area.

**K:** Approach speed (constant = 1600 mm/s).

**T:** Time delay [s] between interruption of the light beam and stand-still of the machine.

**C:** Safety constant (additional distance) = 850mm or 1200mm, see table above.



## Check

The checks should ensure that the Optoelectronic Protective Devices have been used acc. to the national/international regulations, in particular in accordance with the machine and work-equipment directive.

### Check before initial commissioning

- Observe the nationally and internationally valid regulations.
- Is the required safety distance (protective field of the safety sensor to the next point of operation) maintained?
- Is the safety sensor effective during the entire dangerous movement and in all adjustable operating modes of the machine?
- It must not be possible to climb over, climb under or circumvent the light path.
- Ensure that the sensor only detects persons upon entry to the danger area and does not detect whether persons are located within the danger area.
- Is a start-up/restart interlock present?
- Before they begin work, have a competent person train the operating personnel in their respective tasks.

### Regular testing by competent personnel

The reliable interaction of safety sensor and machine must be periodically tested in order to detect changes to the machine or impermissible tampering with the safety sensor.

- Have all tests performed by competent personnel.
- Observe the nationally and internationally applicable regulations and the time periods specified therein.

### Daily check of the effectiveness of the safety sensor

It is extremely important to examine the effectiveness of the protective field daily so that it is ensured that e.g. even with adjustments to e.g. parameters, the protective function is active at all points.

Interrupt the light beam between the transmitter and receiver (test rod Ø 14 mm)

- in front of the transmitter.
- in the middle between the transmitter and receiver.
- in front of and behind the deflection mirror.

It must not be possible to initiate the dangerous state during beam interruption.

## Disposal

For disposal observe the applicable national regulations regarding electronic components.



the **sensor** people

EG-KONFORMITÄTS-ERKLÄRUNG	EC DECLARATION OF CONFORMITY	DECLARATION CE DE CONFORMITE
Der Hersteller	The Manufacturer	Le constructeur
	<b>Leuze electronic GmbH + Co. KG</b> In der Braike 1, PO Box 1111 73277 Owen, Germany	
erklärt, dass die nachfolgend aufgeführten Produkte den einschlägigen Anforderungen der genannten EG-Richtlinien und Normen entsprechen.	declares that the following listed products fulfil the relevant provisions of the mentioned EC Directives and standards.	déclare que les produits identifiés suivants sont conformes aux directives CE et normes mentionnées.
<b>Produktbeschreibung:</b>	<b>Description of product:</b>	<b>Description de produit:</b>
<b>Einweg-Sicherheits-Lichtschanke, Berührungslos wirkende Schutzeinrichtung, Sicherheitsbauteil nach 2006/42/EG Anhang IV SLSR 25B</b> Seriennummer siehe Typschild	<b>Protective throughbeam photoelectric sensor, Active opto-electronic protective device, safety component in acc. with 2006/42/EC annex IV SLSR 25B</b> Part No. see name plates	<b>Barrière unidirectionnelle, Équipement de protection électrosensible, Élément de sécurité selon 2006/42/CE annexe IV SLSR 25B</b> Art. n° voir plaques signalétiques
<b>Angewandte EG-Richtlinie(n):</b>	<b>Applied EC Directive(s):</b>	<b>Directive(s) CE appliquées:</b>
2006/42/EG 2004/108/EG 2006/95/EG	2006/42/EC 2004/108/EC 2006/95/EC	2006/42/CE 2004/108/CE 2006/95/CE
<b>Angewandte Normen:</b>	<b>Applied standards:</b>	<b>Normes appliquées:</b>
EN 61496-1:2004; IEC 61496-2:2006; EN ISO 13849-1:2009; EN 50178:1997		
<b>Benannte Stelle / Baumusterprüfbescheinigung:</b>	<b>Notified Body / Certificate of Type Examination:</b>	<b>Organisme notifié / Attestation d'examen CE de type:</b>
<b>TÜV-SÜD PRODUCT SERVICE GmbH</b> Zertifizierungsstelle Ridlerstraße 65 D-80339 München	/	<b>Z10090368636001</b>
<b>Bevollmächtigter für die Zusammenstellung der technischen Unterlagen:</b>	<b>Authorized person to compile the technical file:</b>	<b>Personne autorisée à constituer le dossier technique:</b>
<b>Robert Sammer; Leuze electronic GmbH + Co. KG</b> Liebigstr. 4; 82256 Fuerstenfeldbruck; Germany		

Owen, 15.06.10  
Datum / Date / Date

Dr. Harald Gröbel, Geschäftsführer / Director / Directeur

Leuze electronic GmbH + Co. KG  
In der Braike 1  
D-73277 Owen  
Telefon +49 (0) 7021 573-0  
Telefax +49 (0) 7021 573-199  
info@leuze.de  
www.leuze.com

Leuze electronic GmbH + Co. KG, Sitz Owen, Registergericht Stuttgart, HRA 230712  
Persönlich haftende Gesellschafterin Leuze electronic Geschäftsführungs-GmbH,  
Sitz Owen, Registergericht Stuttgart, HRB 230550  
Geschäftsführer: Dr. Harald Gröbel (Vorsitzender), Karsten Just  
USK-IDNr. DE 145912521 | Zollnummer 2554232  
Es gelten ausschließlich unsere aktuellen Verkaufs- und Lieferbedingungen  
Only our current Terms and Conditions of Sale and Delivery shall apply

Nr. 609100-2010/04

LEO-ZQM-149-01-FO